

**Entertainer****VOICE**

	Voice Name	Voice Type	Voice Number		
			MSB#	LSB#	Prg#(1)
1	Jodel JoDILo	S.Articulation!	8	33	51
2	Jodel LoLa	S.Articulation!	8	34	51
3	Jodel Legato	S.Articulation!	8	35	51
4	Jodelglueck	MegaVoice	8	1	51
5	SY Wire	Cool!	104	1	104
6	SY WirePitch	Cool!	104	2	104
7	SY FMGuitar	Cool!	104	3	104
8	SY Bell	Cool!	104	1	101
9	HardPiano	Cool!	104	0	2
10	KaiserPiano	Cool!	104	1	2
11	KaiserBells	Cool!	104	2	101
12	HardPianoBell	Cool!	104	2	2
13	HardPianoBellLd	Cool!	104	3	2
14	WirePiano	Cool!	104	4	2
15	YoungPianoBells	Cool!	104	5	2
16	HillWire	Cool!	104	4	104
17	HillWireLead	Cool!	104	5	104
18	SuperBell	Cool!	104	3	101
19	SuperBellTub	Cool!	104	4	101
20	HillBelly	Cool!	104	5	101
21	SchlagerKit	Live!Drums	127	0	63
22	OrchHit1	Cool!	104	0	56
23	OrchHit2	Cool!	104	1	56
24	OrchHit3	Cool!	104	2	56
25	OrchHit4	Cool!	104	3	56
26	OrchHit Menu	Cool!	104	4	56
27	Crowd Legato	S.Articulation!	8	36	51
28	Crowd	MegaVoice	8	0	58
29	Entertainer FX	Live!SFX	126	0	108
30	Tusch FX	Live!SFX	126	0	109

**STYLE**

	Style Name	Style Type
1	(D)PartyRock	Normal
2	(D)ShuffleRock	Normal
3	(D)SwingSchlager	Normal
4	70sSchlager1	Normal
5	70sSchlager2	Normal
6	80sItaloPowerBld	Normal
7	80sMunich	Normal
8	AlpenParty	Normal
9	AustriaLiad	Normal
10	BailarKings	Normal
11	BallSambaFast	Normal
12	CapriSchlager	Normal
13	DeutschRock	Normal
14	EntertainerBand	Normal
15	FantasyFox	Normal
16	FisherFox	Normal
17	KaiserSchlager	Normal
18	KaiserShuffle	Normal
19	KarnevalMarsch1	Normal
20	KarnevalMarsch2	Normal
21	MallePolka	Normal
22	ModernSamba	Normal
23	ModernSchlager1	Normal
24	ModernSchlager2	Normal
25	OberPolka2	Normal
26	Oktoberfest	Normal
27	PartyApreski	Normal
28	PartyMalle	Normal
29	RomantikAmour	Normal
30	RoseWaltz	Normal
31	SchlagerDisco	Normal
32	SchlagerDiscoFox	Normal
33	SchlagerJive	Normal
34	SchlagerMarsch	Normal
35	SchlagerSamba	Normal
36	SchlagerShuffle	Normal
37	SchlagerWaltz	Normal
38	SchunkeWalzer	Normal
39	SlowHillFox	Normal
40	SoftPopFox	Normal